

	FRAMED WALL 100.00 Installation Instructions	Solution 100.00
	These drawings have not been reviewed and approved by the architect and cannot ever be used for construction purposes. These drawings are for the exclusive use of Lumicor. Any use of these drawings by others will be at their own risk and lumicor will not be responsible for issues that may arise from their use.	12/20/19
	© Lumicor 2019 — All Rights Reserved. For more information, visit www.lumicor.com or call 1.888.LUMICOR (888.586.4267)	Page 1 of 2

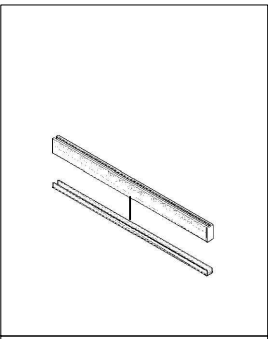

TOOLS

- CHALK LINE & PLUMB BOB
- PENCIL
- RUBBER MALLET
- SLOTTED OR PHILLIPS SCREWDRIVER
- ANCHOR SCREWS (DETERMINED BY APPLICATION) (NOT INCLUDED)

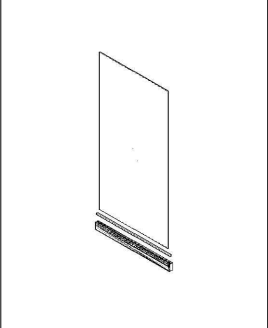

INSTALLATION INSTRUCTIONS

1. DETERMINE PLACEMENT OF THE FRAME PARTITION SYSTEMS AND MARK WITH A CHALK LINE OR PENCIL ON THE FLOOR.

2. MEASURE, MARK, AND CUT METAL EXTRUSIONS TO SIZE.

3. FASTEN THE ANCHOR CHANNEL TO THE FLOOR USING SCREWS (OBTAIN LOCALLY).

4. PLACE THE SILL OVER THE ANCHOR CHANNEL AND SECURE.

5. POSITION THE HEADER AT THE CEILING AND FASTEN WITH SCREWS (OBTAIN LOCALLY). USE A PLUMB BOB TO DETERMINE THE PLACEMENT OF THE HEADER. SHIM THE HEADER TO MAINTAIN A SQUARE POSITION DIRECTLY ABOVE THE SILL.





6. APPLICATIONS USING MITERED CORNERS WILL USE 90° STEEL MITER BRACKETS ON HEADER AND SILLS.

7. POSITION THE NEOPRENE SETTING BLOCKS IN THE SILLS' PANEL CHANNEL.

8. INSERT THE LUMICOR PANEL BY PUSHING IT UP INTO THE HEADER AND LOWERING THE BOTTOM EDGE ONTO THE SETTING BLOCKS. OPTION: MULTI-PANEL SYSTEMS MAY REQUIRE A VERTICAL POST BETWEEN LUMICOR PANELS. VERTICAL POSTS ARE FITTED BETWEEN HEADER AND SILL.

9. SECURE THE PANEL AT THE HEADER AND SILL BY PUSHING THE APPROPRIATE GLAZING STRIPS INTO PLACE.

10. INSTALL END CAPS ON EXPOSED ENDS OF HEADERS AND SILLS.

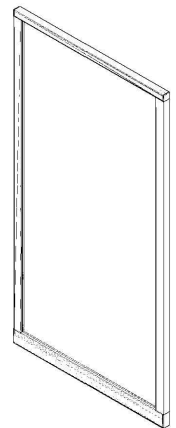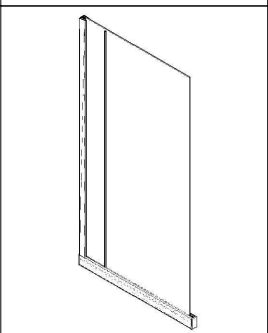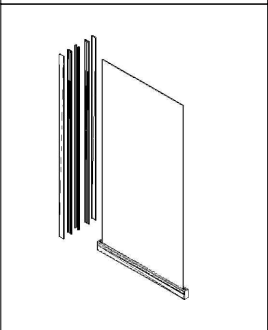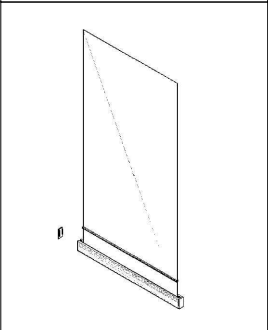

FRAMED WALL
100.00 | Installation Instructions

These drawings have not been reviewed and approved by the architect and cannot ever be used for construction purposes. These drawings are for the exclusive use of Lumicor. Any use of these drawings by others will be at their own risk and lumicor will not be responsible for issues that may arise from their use.

© Lumicor 2019 — All Rights Reserved. For more information, visit www.lumicor.com or call 1.888.LUMICOR (888.586.4267)

Solution
100.00

12/20/19

Page 2 of 2