


ENCLOSURE BY OTHERS

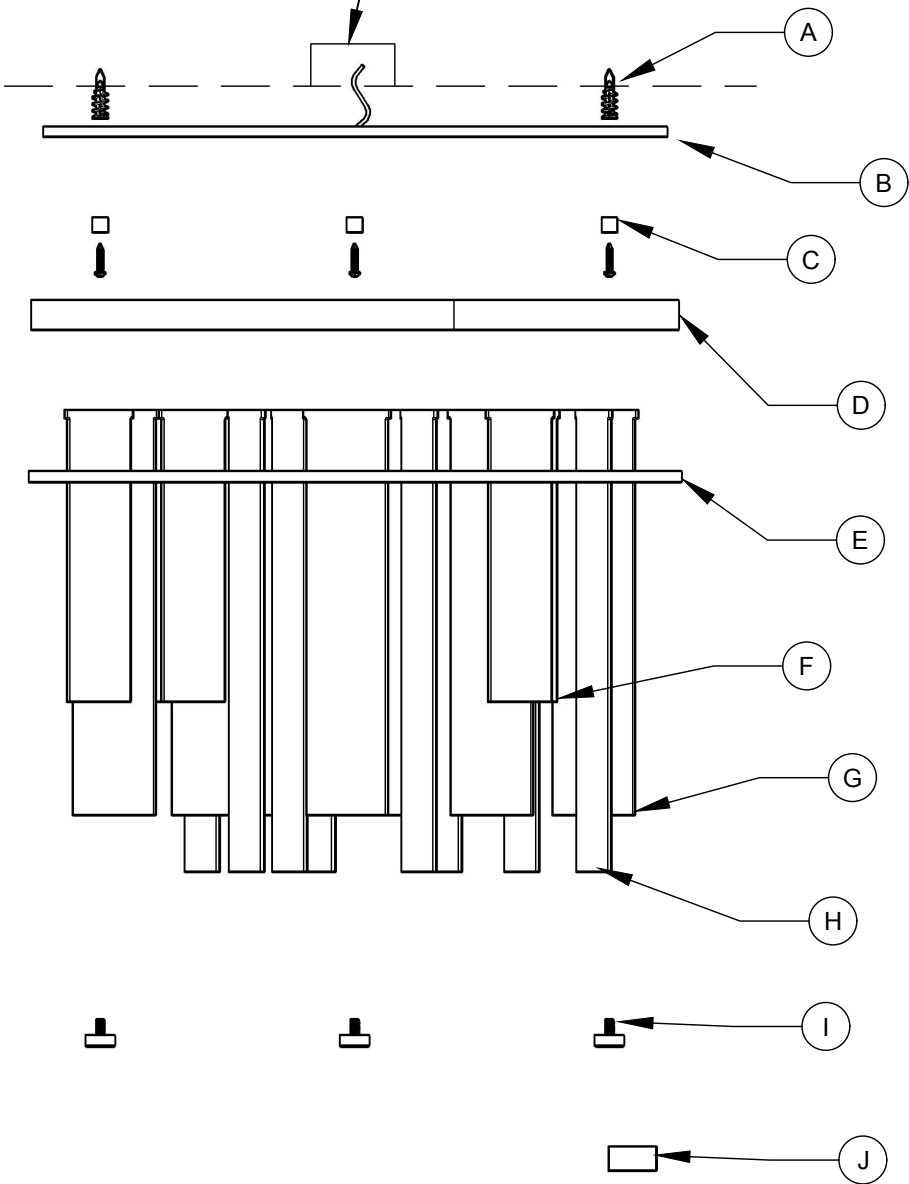

## INSTALLATION INSTRUCTIONS

1. DRILL ANCHOR LOCATIONS & SCREW IN COVA ANCHOR (A).
2. CONNECT LUMILIGHT (B) TO POWER SOURCE ACCORDING TO WIRING DIAGRAM (PAGE 2); THE WIRE EXIT IS LOCATED AT CENTER OF EACH COVA FIXTURE.
3. PLACE LUMILIGHT (B) ON ANCHOR POINTS (A). SCREW STANDOFFS (C) TO ANCHOR TO HOLD LUMILIGHT IN PLACE.
4. REMOVE MASKING ON COVA LID (E), RESIN SKIRT (D) AND BLADES (F, G, H).
5. SLOT COVA BLADES (F, G, H) AND RESIN SKIRT (D) INTO COVA LID (E).  
**DO NOT DROP BLADES INTO LID - GUIDE WITH CARE.**
  - 5.1. SLOT SIZES SCALE WITH COVA BLADE SIZE; E.G., THE LONGEST BLADE WILL ONLY FIT INTO THE LARGEST SLOT.
  - 5.2. INSERT RESIN SKIRT (D) INTO PERIMETER GROOVE. ATTACH AT SEAM WITH ADHESIVE BACK CONNECTOR PROVIDED (J).
6. ATTACH COVA LID (E) BY ATTACHING STANDOFFS CAPS (I) TO BARREL (C).



### COVA 601.00 | Installation Instructions

These drawings have not been reviewed and approved by the architect and cannot ever be used for construction purposes. These drawings are for the exclusive use of Lumicor. Any use of these drawings by others will be at their own risk and lumicor will not be responsible for issues that may arise from their use.

© Lumicor 2019 — All Rights Reserved. For more information, visit [www.lumicor.com](http://www.lumicor.com) or call 1.888.LUMICOR (888.586.4267)


Patent Pending

Solution  
601.00

01/29/20

Page 1 of 2

# WIRING DIAGRAM

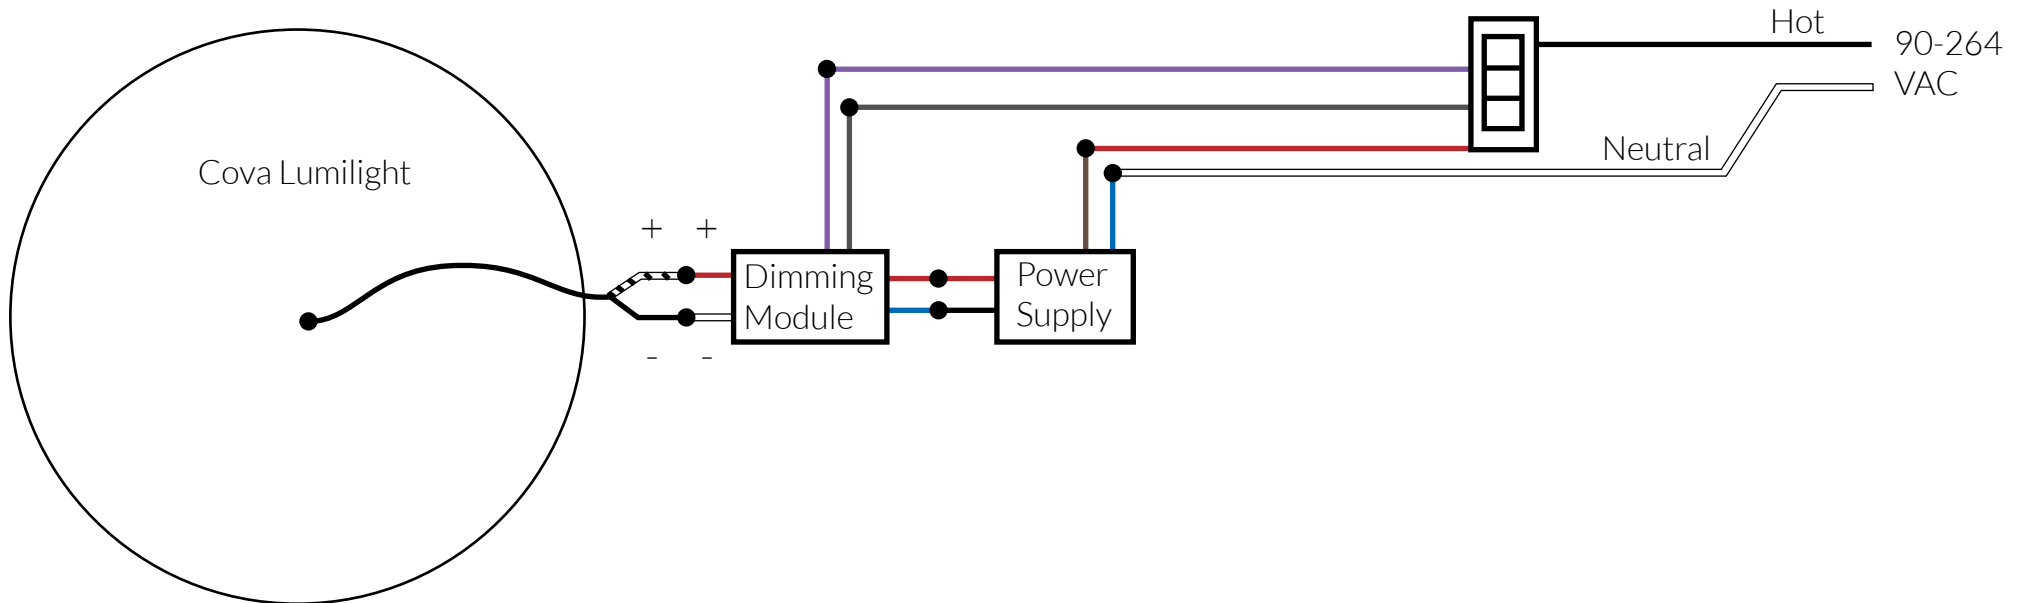

## COVA 601.00 | Installation Instructions

These drawings have not been reviewed and approved by the architect and cannot ever be used for construction purposes. These drawings are for the exclusive use of Lumicor. Any use of these drawings by others will be at their own risk and lumicor will not be responsible for issues that may arise from their use.

© Lumicor 2019 — All Rights Reserved. For more information, visit [www.lumicor.com](http://www.lumicor.com) or call 1.888.LUMICOR (888.586.4267)

Patent Pending

Solution  
601.00

01/29/20

Page 2 of 2