


INSTALLATION INSTRUCTIONS

- 1. USING A $\frac{1}{2}$ " MASONRY BIT, DRILL TO A MINIMUM DEPTH OF 6" THROUGH THE BOTTOM OF YOUR MOUNT.
- 2. THREAD THE ANCHOR THROUGH THE BASE OF THE MOUNT SECURING IT TO YOUR SUBSTRATE.
- 3. TEMPORARILY PLACE ONE POST OVER THE MOUNTING BASE AND FASTEN THE 3 BUTTON HEAD SCREWS FROM THE OUTSIDE. BE SURE TO ALIGN YOUR GRIPPER HOLES THE DIRECTION THE PANEL IS TO BE INSTALLED.
- 4. USING THE TEMPORARILY PLACES POST. MOUNT GRIPPERS PROVIDED TO THE POST AT THE PREDRILLED LOCATIONS.
- 5. ALIGN WALL GRIPPER LOCATIONS WITH THE GRIPPERS ALONG THE POST.
- 6. REMOVE THE FREE STANDING POST WHILE INSTALLING THE PANEL TO THE WALL.
- 7. INSTALL THE PANEL TO THE WALL MOUNTED GRIPPERS. USE THE CUP POINT SET SCREW THROUGH THE LUMICOR PANEL.
- 8. SUPPORT THE LUMICOR PANEL WHILE THE POST IS MOUNTED TO IT'S MOUNTING PLATE. SCREW THE 3 BASE SCREWS FROM THE OUTSIDE OF THE POST TO IT'S BASE.
- 9. SCREW IN THE CUP POINT SCREWS THROUGH THE PANEL ON THE SECOND SET OF GRIPPERS.
- 10. FINISH BY INSERTING THE TOP CAPS TO ALL POSTS.

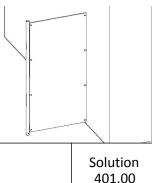



These drawings have not been reviewed and approved by the architect and cannot ever be used for construction purposes. These drawings are for the exclusive use of Lumicor. Any use of these drawings by others will be at their own risk and lumicor will not be responsible for issues that may arise from their use.

WALL MOUNTED POST PARTITION

401.00 | Installation Instructions

Page 2 of 2

© Lumicor 2019 — All Rights Reserved. For more information, visit www.lumicor.com or call 1.888.LUMICOR (888.586.4267)