



INSTALLATION INSTRUCTIONS

1. INSTALL MOUNTING PLATES. ALL HARDWARE MUST BE ATTACHED TO STRUCTURAL MEMBERS. USE THREAD LOCK ONLY WHERE INDICATED, DO NOT APPLY ON RESIN PANEL.
2. ATTACH BARRELS TO MOUNTING HARDWARE WITH MOUNT BARREL SCREW.
3. INSERT CABLE INTO CEILING MOUNT BARREL AND TIGHTEN 3MM ALLEN SET SCREW TO SECURE.
4. CUT CABLE TO DESIRED LENGTH. IF A LEVEL PANEL IS DESIRED, CUT CABLES FOR THE TOP HOLES 9-5/8" (24.5CM) SHORTER THAN THE CABLES FOR THE BOTTOM HOLES.
5. ATTACH HORIZONTAL PANEL CONNECTORS TO CABLES AND TIGHTEN 3MM SET SCREWS.
6. INSERT CAPS THROUGH PANEL AND THREAD INTO HORIZONTAL PANEL CONNECTORS.
7. (OPTIONAL) DOUBLE PANEL CONNECTORS (ORDERED SEPARATELY), MAY BE USED TO CONNECT PANELS END-TO-END.

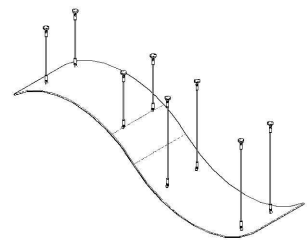

	CEILING WAVE 501.00 Installation Instructions	Solution 501.00
	<small>These drawings have not been reviewed and approved by the architect and cannot ever be used for construction purposes. These drawings are for the exclusive use of Lumicor. Any use of these drawings by others will be at their own risk and lumicor will not be responsible for issues that may arise from their use.</small>	12/24/19
	<small>© Lumicor 2019 — All Rights Reserved. For more information, visit www.lumicor.com or call 1.888.LUMICOR (888.586.4267)</small>	Page 2 of 2